

請在安裝和使用此微波爐前詳細閱讀本使用手冊，並保存好以備日後參考。

目錄

目錄	1
規格	1
安裝	1
性能圖示.....	2
控制板說明.....	2
特別功能.....	4
安全使用要點.....	4
操作方法.....	5
微波爐使用常識.....	6
微波爐的清潔與保養.....	7


規格

型號	T703
額定電壓及額定頻率	230V-50Hz
額定輸入功率	1200W
微波輸出功率	800W
額定微波頻率	2450MHz
外形尺寸（高×寬×深）	295mm × 458mm × 392mm
內腔尺寸（高×寬×深）	206mm × 300mm × 284mm
內腔容積	20L
淨重	13Kg

安裝


1. 把微波爐內的包裝物全部取出，若微波爐的外殼上附有保護膜，請將保護膜撕掉後再使用。
2. 應仔細查看微波爐有否損壞。如有損壞，請立刻聯絡經銷商或本公司特約維修部。
3. 20L 微波爐淨重約 13 千克，應放置於有足夠承托力的水平面上。
4. 本微波爐應在通風乾燥，無腐蝕性氣體的環境中使用，遠離高溫及蒸氣。
5. 切勿在爐頂放置任何物件，並保持與頂部壁櫃距離至少 20 厘米。
6. 微波爐兩旁應與牆壁距離至少 5 厘米，爐背應與牆壁至少距離 10 厘米。
7. **警告——為了防止觸電，必須確保此微波爐接地良好。**

性能圖示

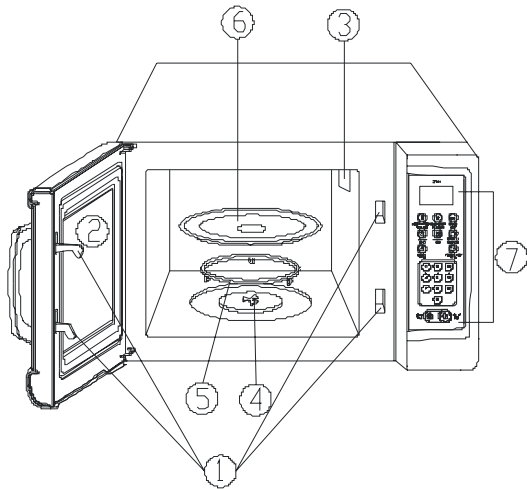

1. 門安全聯鎖開關——確保：爐門打開，微波爐不能工作；爐門關上，微波爐才能工作。
2. 視屏窗——有金屬屏蔽層，可透過網孔，觀察食物烹調情況。
3. 波導口——磁控管發射的微波進入腔體的通道。
4. 轉軸——帶動玻璃轉盤轉動。
5. 轉盤支承——支承玻璃轉盤並按其軌道轉動。
6. 玻璃轉盤——裝好食物的容器放在轉盤上，加熱時轉盤轉動，使食物烹調均勻，以達到理想均勻烹調的效果。
7. 控制板——詳見控制板說明。


控制板說明

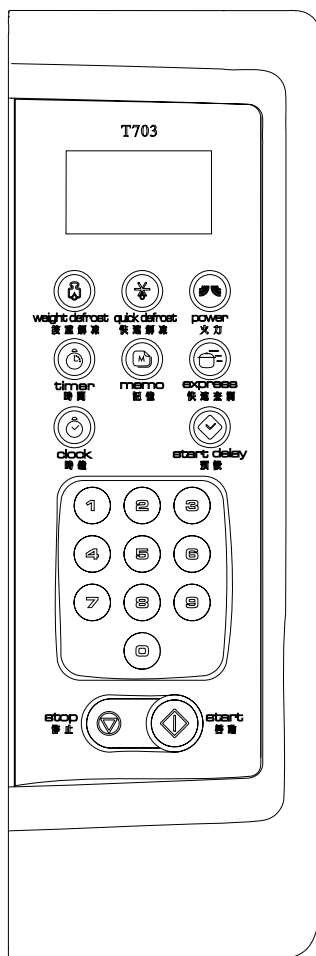

顯示窗說明

按重解凍

預設 童鎖

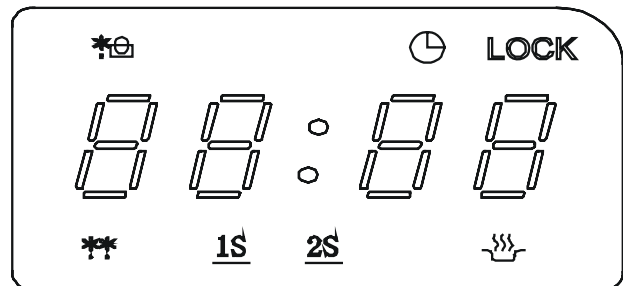

快速解凍

第一

第二

微波烹調

階段

多段烹調組合

- 第一段：按重解凍或快速解凍
第二段：微波烹調
第三段：微波烹調

功能

- 時鐘功能
預設功能
按重解凍
快速解凍
快速烹調
微波烹調
多段烹調

火力

- 用來輸入所需微波火力，共有 10 種火力調節，火力強度以 10% 依次遞減。
- 在微波爐烹調時如不另外輸入火力，微波爐將自動以最高火力烹調。
- 微波烹調過程中，按【火力】鍵可查詢當前火力。
- 下面是各火力相應的顯示符號及輸出功率：

火力	符號	輸出功率
按 10 鍵	P10	100%輸出功率
按 9 鍵	P9	90%輸出功率
按 8 鍵	P8	80%輸出功率
按 7 鍵	P7	70%輸出功率
按 6 鍵	P6	60%輸出功率
按 5 鍵	P5	50%輸出功率
按 4 鍵	P4	40%輸出功率
按 3 鍵	P3	30%輸出功率
按 2 鍵	P2	20%輸出功率
按 1 鍵	P1	10%輸出功率
按 0 鍵	P0	計時功能

時間

- 用來輸入微波烹調程序。
- 烹調時間最長可選擇到 99 分 99 秒。

時鐘

- 用來輸入當日時間或在烹調過程中按【時鐘】鍵可查詢當前時間。
- 當微波爐發生故障或切斷電源時，必須重新調校時間。

停止

- 按【停止】鍵可以取消前面已輸入的操作。

啓動

- 按【啓動】鍵可以啓動微波爐工作。當程序開始時，烹調顯示燈和爐燈便會亮起，通風風扇和轉盤也會開始轉動。

注：在程序完畢後系統會發出提示音，而爐燈和風扇也會自動關掉。如果爐門不打開或不按任意鍵，微波爐將每隔兩分鐘發出一

提示音，以便提醒用戶。

注：要想中途停止烹調程序 只需打開爐門，微波爐將立刻停止工作。

- 如不需繼續工作，請按【停止】鍵。
- 如需繼續工作，請關緊爐門，并按【啓動】鍵，烹調程序便會再次啓動。

按重解凍

- 按重量將冷藏肉類、家禽、海鮮解凍。
 - 只需輸入食物的種類和重量，微波爐會自動選擇解凍時間及火力。
 - 各類食物的最高解凍重量及顯示如下：
- | 按重解凍 | 食物種類 | 最高重量 | 顯示 |
|-------|------|--------|----|
| 按 1 次 | 肉類 | 2300 克 | d1 |
| 按 2 次 | 家禽類 | 4000 克 | d2 |
| 按 3 次 | 海鮮類 | 900 克 | d3 |
- 如食物超出最高解凍重量，微波爐將不會啓動，這時可選用快速解凍功能。

快速烹調

- 此功能可快速加熱食物，按下【快速烹調】鍵，可選擇四種 100% 高火力的烹調時間有 15 秒、30 秒、1 分鐘、2 分鐘。

快速解凍

- 只需輸入解凍食物所需的解凍時間，微波爐會自動從中高火至中低火再降至低火操作。
- 烹調時間最長可選擇到 99 分 99 秒。

預設

- 用以指令微波爐在預設時間自動啓動。
- 在輸入預設程序前，必須將時鐘校正。
- 當微波爐正處於預設狀態，預設顯示燈將會不停的閃動。
- 快速烹調不能設定預設功能。

記憶

- 如選擇多段烹調功能，可按【記憶】鍵選定在第一階段或第二階段烹調。
- 微波爐的顯示窗顯示出微波爐正進行的烹調階段。

特別功能

兒童保險鎖

- 用來防止兒童在沒有成人指導的情況下使用微波爐。
- 當兒童保險鎖啟動後，【童鎖】顯示燈將會亮起，此時微波爐不能操作。

當計時程序開始，爐內的照明燈、冷卻風扇及轉盤也開始工作，而微波能量却完全停止輻射，計時程序結束時，系統將會發出提示音。

計時

- 用來方便你進行爐外烹飪操作時計時，

自動提示

- 當完成解凍或烹調程序後，如果爐門不被打開或任意鍵沒有被按下，微波爐將每隔兩分鐘自動發出一提示音。

安全使用要點

使用

1. 使用前請詳細閱讀“使用手冊”全部內容。
2. 本微波爐專為家庭加熱及烹調食物而設計，故不適用於其它工商用途。
3. 警告：只有在已經提供充分的指導以致於兒童能夠採用安全的方法使用微波爐，並且明白不正確的使用會造成危險時，才能允許兒童在無人監控的情況下使用微波爐。
4. 用戶使用之前，應檢查所用器皿是否適用於微波爐。
 - a. 微波烹調時切勿使用金屬器皿。帶金、銀邊的器皿也不應使用。微波爐中通常使用陶瓷、耐熱玻璃、耐熱塑料或紙質器皿。
 - b. 窄頸瓶不可直接放入微波爐烹煮。
 - c. 使用保鮮紙遮蓋食物烹調時，請將保鮮紙一角摺上，使之通氣，煮好後將保鮮紙小心拆開，以免蒸氣灼傷。
5. 使用時先放入轉盤支承及玻璃轉盤，再將盛好食物的器皿放在玻璃轉盤上進行烹調。
6. 爐內無食物時，請不要使微波爐工作，以免空載運行損壞機器。
7. 切勿將一般的水銀溫度計放入爐內邊加熱，邊測量，以免引起打火或損壞。
8. 烹調少量食物時，要多加觀察，防止過熱起火。
9. 當食物在塑料、紙或其它可燃材料制成的易處理容器中加熱或烹調時，應時時注意，防止起火。
10. 烹調中發生冒煙或起火現象時，請不要立刻打開爐門，否則遇空氣會加大火勢，應立即切斷電源。
11. 從微波爐內提取食物和器皿時，應當使用鍋夾或戴上隔熱手套，以免高溫燙傷。
12. 為防止轉盤受損壞，請遵守下列事項：
 - a. 用水清洗轉盤時，應先待轉盤冷卻。
 - b. 切勿置滾熱食品或熾熱容器於冷卻的轉盤之上。
 - c. 切勿置冰冷食品或冰冷容器於熾熱的轉盤之上。
 - d. 注意轉盤的最大負載重量不能超過 5kg。
13. 每次微波爐使用完畢，最好將一盛滿水的玻璃杯置於爐內玻璃轉盤上，避免誤操作損壞機器。
14. 不要用微波爐儲存任何物品。
15. 奶瓶和嬰兒食品罐應經過攪拌或搖動，喂食前應檢查瓶內食物的溫度，避免燙傷。

16. 警告：除有資格的維修人員外，其他人來執行檢修操作都是危險的，包括拆下防止微波能量泄漏的防護蓋等操作。
17. 警告：如果微波爐門或門封已損壞，則不得再使用，直到經有資格的維修人員修好為止。
18. 警告：不要直接加熱裝在密封容器內的液體或其他食物，因為這樣有可能發生爆炸。
19. 警告：如果電源軟綫損壞，為了避免危險，必須由制造廠、其維修部或類似的專業人員更換。
20. 警告：微波爐屬於有人看管的產品，請在烹調過程中人不要離開現場。
21. 警告：用微波爐燒開水時要盡量使用無蓋的寬口容器。如要加入咖啡粉、奶粉、麥片或其它衝劑，必須先對開水進行攪拌或擱置幾分鐘稍涼，以免水沸騰而被燙傷。

食物

1. 切勿煮帶殼蛋，壓力會使蛋爆裂。另外蛋黃、蛋白也要用牙籤刺穿數次。
警告——已煮好的湯圓或荷包蛋等，馬上取出可能會造成其內部液體沸騰爆破而濺傷人體。注意應打開爐門後，略擱置一會兒，再取出食用。
2. 煮食時間不宜過長，因為煮食不足可繼續，而過度則無法補救。
3. 烹調食譜所提供的是烹調的大約時間，影響烹調時間的因素有：所喜歡的煮熟程度，食物的初溫、形狀大小、份量和使用器皿的形狀、大小以及食物的排列、遮蓋、翻攪等。請參閱食譜中的“微波爐烹調技巧”，再參照這些因素，適當修正烹調時間。
4. 表面無孔的食物（如蛋、栗子、馬鈴薯、香腸等），請去皮或在外皮上開一裂縫或叉幾個小孔，否則受熱膨脹，可能發生爆裂。
5. 不可用微波爐煎炸食物。

操作方法

調較時鐘

例：6 時 45 分

- 步驟：1. 按【時鐘】鍵
2. 按【停止】鍵
3. 按數字鍵 6 4 5
4. 再按【時鐘】鍵一次確認

3. 按【時間】鍵
4. 按數字鍵 2 0 0
5. 按【火力】鍵
6. 按數字鍵 3
7. 按【啓動】鍵

注：微波爐將在 2 時整開始進行微波烹調。

微波烹調

例：輸入 2 分鐘，30%火力的烹調程序

- 步驟：1. 按【時間】鍵
2. 按數字鍵 2 0 0
3. 按【火力】鍵
4. 按數字鍵 3
5. 按【啓動】鍵

快速烹調

例：輸入 2 分鐘的快速烹調程序

- 步驟：1. 按【快速烹調】鍵到顯示 2:00
2. 按【啓動】鍵

按重解凍

例：輸入解凍 600 克蝦的程序

- 步驟：1. 按【按重解凍】鍵到顯示 d3
2. 按數字鍵 6 0 0
3. 按【啓動】鍵

注：解凍過程中翻轉食物可使之解凍均勻。

預設

例：如當前時鐘為 1 點整，輸入 2 時整開始 2 分鐘 30%火力的微波烹調程序

- 步驟：1. 按【預設】鍵
2. 按數字鍵 2 0 0

快速解凍

例：輸入 5 分 30 秒的快速解凍程序

步驟：1. 按【快速解凍】鍵

2. 按數字鍵 5 3 0

3. 按【啓動】鍵

注：快速解凍功能可用在按重解凍範圍以外的食物或超出按重解凍最高重量限制的食物上。

多段烹調

本微波爐可設置兩段或三段烹調程序。

例：輸入多段烹調程序

快速解凍——微波烹調——微波烹調

步驟：1. 按【快速解凍】鍵

2. 按數字鍵輸入所需解凍時間

3. 按【記憶】鍵，此時顯示燈 1S 亮

4. 按【時間】鍵

5. 按數字鍵輸入所需烹調時間

6. 按【火力】鍵

7. 按數字鍵輸入所需微波火力

8. 按【記憶】鍵，此時顯示燈 2S 亮

9. 按【時間】鍵

10. 按數字鍵輸入所需烹調時間

11. 按【火力】鍵

12. 按數字鍵輸入所需微波火力

13. 按【啓動】鍵

注：1. 快速解凍和按重解凍程序只能設在第一段烹調，在輸入第一或第二階段烹調程序時必須先按【記憶】鍵。

2. 在按【啓動】鍵前可按【記憶】鍵重新設置第一或第二階段的烹調程序。

3. 快速烹調不能設在多段烹調程序中。

計時

步驟：1. 按【時間】鍵

2. 用數字鍵輸入所需計時時間

3. 按【火力】鍵

4. 按數字鍵 0

5. 按【啓動】鍵

兒童保險鎖

a. 兒童保險鎖設置

步驟：在待機狀態下，按住【停止】鍵三秒鐘後，系統會發出提示音，此時兒童保險鎖顯示燈 LOCK 會亮起。程序完成後，微波爐便不能操作。

b. 解除兒童保險鎖

步驟：按住【停止】鍵三秒鐘後，系統會發出提示音，此時兒童保險鎖顯示燈 LOCK 會熄滅。程序完成後，微波爐可以操作。

微波爐使用常識

1. 如果微波爐不工作，應檢查：

▲ 電源插頭是否插好。

▲ 爐門是否關好。

▲ 兒童保險鎖是否被鎖住。

▲ 家電保護器是否跳閘或燒斷。

2. 爐內無食物，而微波爐被偶然啓動。

請立即打開爐門或按【停止】鍵，停止其工作。

3. 當電壓波動時，微波爐仍能工作，只是受電壓偏高或偏低的影響，微波輸出功率會相應升高或降低，故烹調時間及效果會有所變化，這是屬於正常現象。


微波爐的清潔與保養

注意：切勿使用強洗滌劑、汽油、研磨粉和金屬刷來清洗爐子的任何部位

1. 清洗爐腔之前，須關閉微波爐，並從插座上拔去電源綫插頭。
2. 經常保持爐腔清潔。當食物或湯水濺到爐內壁時，可用濕布擦去。如爐內壁很髒則可使用軟性洗劑，切勿使用粗糙、磨損性的洗劑。
3. 必須經常清潔玻璃盤。可先用溫熱的肥皂水清洗，再用清水洗淨擦乾。
4. 必須經常擦洗轉盤支承和爐腔底面。請用軟性劑洗爐腔底面，而轉盤支承則可用溫熱的肥皂水洗，清洗後抹乾放回原處。
5. 必須經常清潔門的密封面。可先用軟乾布浸肥皂水清洗，再用軟乾布擦淨。
6. 微波爐外表面用軟乾布浸肥皂水清洗後，再用軟乾布擦淨。注意不要讓水滲入爐縫或通風口。
7. 如控制板被弄濕，則請用軟的乾布抹擦，不能用粗糙、磨損性的洗劑來擦控制板，擦控制面板時，請將爐門打開，以免誤操作。
8. 爐內外如有蒸氣凝成的水滴，可用軟布擦淨。
9. 爐內如有異味，可用一杯水加幾匙檸檬汁煮 5-7 分鐘，即可消除。
10. 微波爐若長期不用，應拔掉電源插頭，放在通風乾燥，沒有腐蝕性氣體的環境中。
11. 爐子發生故障，必須由本廠培訓的專業維修人員檢修，其它任何人拆修將是危險的。

Instructions for use

Model: T703

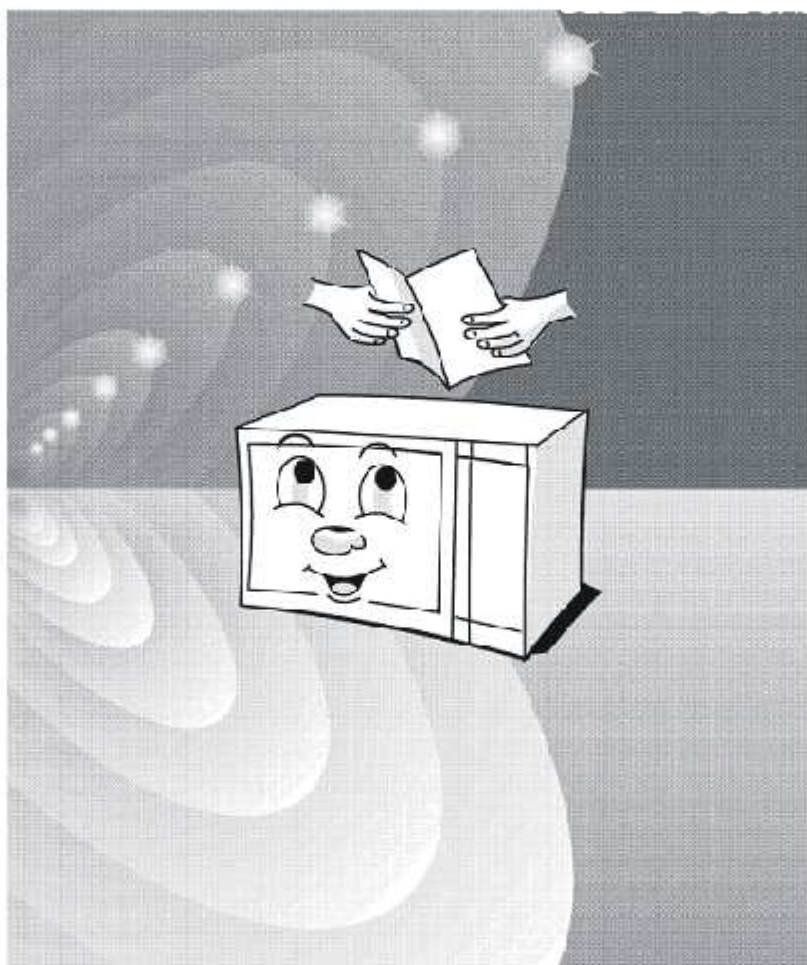The Whirlpool logo, consisting of a stylized swirl icon above the brand name "Whirlpool" in a bold, serif font.

Content

Content	1
Specifications.....	1
Installation	1
Performance Diagram.....	2
Control panel description.....	3
Special function	5
Safety Precautions	5
Operation method	7
Microwave usage common sense	8
Microwave oven cleaning and care	9

Specifications

Model	T703
Rated voltage and frequency	230V~50Hz
Rated power input	1200W
Microwave power output	800W
Rated microwave frequency	2450MHz
Outside dimensions	295mm×458mm×392mm
Inner dimensions	206mm×300mm×284mm
Inner capacity	20L
Net weight	13 kg


(Note: the dimensions are in order of height, width, and depth)

Installation

1. Take out all the packaging material from inside the oven.
2. Check carefully if there is any damage to the oven. If damaged, immediately notify dealer or send to the manufacturer's service center.
3. 20L microwave oven weighs 13kg and should be placed on a level surface able to hold it.
4. This oven should be used in a environment that is dry and airy place without acidic gases and must be far away from high temperature and steam.
5. Do not place any article on the oven top and the distance to a top cabinet should be at least 20cm.
6. A 5cm distance to both of the oven's left and right sides must be observed. The backside of the oven should be at least 10cm away from the wall.


7. Warning: to prevent electric shock, it must be well grounded of the oven.

Performance Diagram

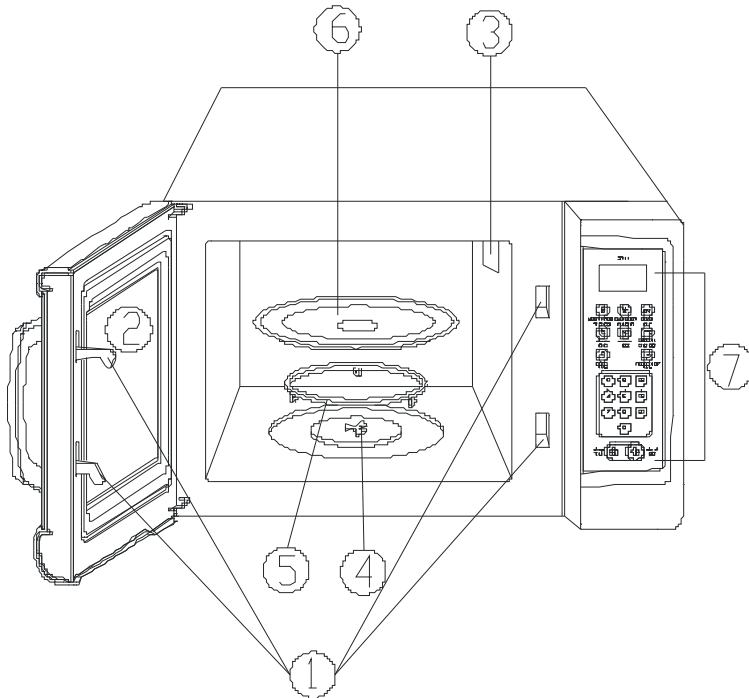


1. Door safety lock system: to ensure when the door is opened, the oven doesn't work; when the door is shut, the oven could work.
2. The Window: there is a metal shield layer, it could be observed of the cooking process through the net holes.
3. Wave-guide hole: the magnetron would emit microwave which enters the cavity through it.
4. Shaft: it would turn around the glass plate.
5. Turntable support: these support the turntable and turn around the circle.
6. Glass turntable: food container is placed on the turntable and turns when heated to make food cooked evenly and achieve the ideal even cooking effect.
7. Control panel: more detail to be seen on control panel description.

Control panel description

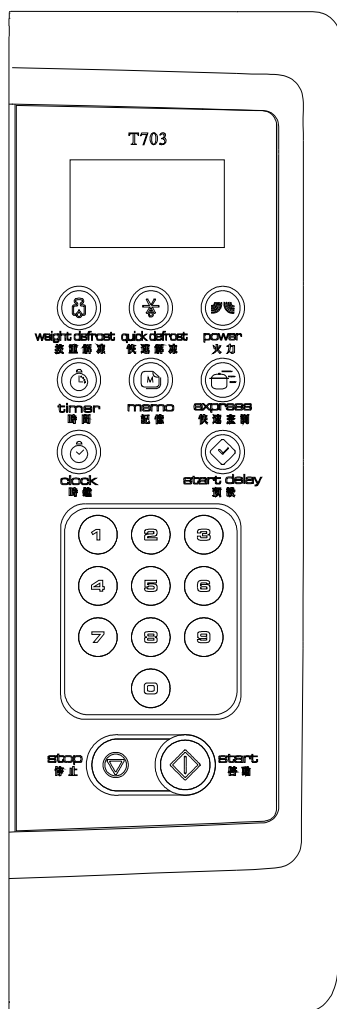

Display window indicators

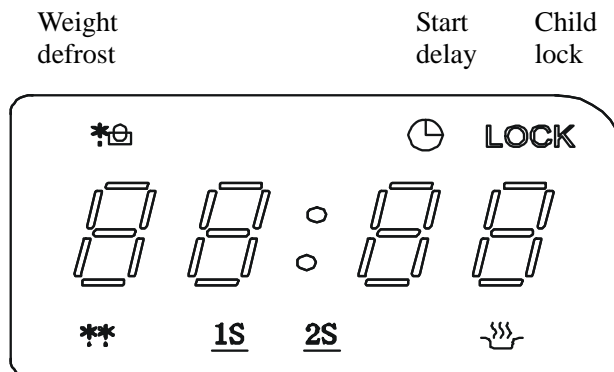

Quick
defrost

1st
stage

2nd
stage

Microwave
cooking

Multi stage cooking

1st stage: weight defrost

or quick defrost.

2nd stage: microwave cooking

3rd stage: microwave cooking

Function

Clock

Start delay

Weight defrost

Quick defrost

Quick cooking

Microwave

Multi stage
cooking

POWER

- Used to enter power. 10 level to adjust oven, power strength decrease in 10%.
- When cooking, if input not power, auto start at max. power.
- During cooking, press to see power.
- The following is power and corresponding output power

Power (press)	Display	Power output
10	P10	100%
9	P9	90%
8	P8	80%
7	P7	70%
6	P6	60%
5	P5	50%
4	P4	40%
3	P3	30%
2	P2	20%
1	P1	10%
0	P0	Timer

TIMER

- Used to enter microwave cooking program.
- Cooking time longest is 99 min. 99 sec.

CLOCK

- Used to enter time of day or check time of day during cooking
- You must readjust time after a power cut.

STOP

- Press to cancel previous entries.

START

- Press to start working. When program starts, cooking indicator lights up and fan, turntable works also.

Note: system may beep after finished, the fan and lamp will turn off. If the oven door not opened or key not pressed, the oven will beep every two minutes to remind user.

Note: if you want to stop the oven, open the door and the oven will stop.

- If don't want to continue working, press START.
- If want to continue, close the oven door and press START.

WEIGHT DEFROST

- Defrost food by weight of meat, poultry and seafood.
- You only have to enter weight and kind of food, oven will automatically select time and power.
- The maximum weight of defrost display as follows.

Weight defrost	foods	Weight max.	Display
Press once	Meat	2300gr.	d1
Press twice	Poultry	4000gr.	d2
Press 3 times.	seafood	900gr.	d3

- If food exceeds max. defrost weight, microwave oven will not start, not may choose quick defrost.

EXPRESS

- Food may be heat quickly with this function, press to select four kind of 100% power cooking time 15 sec., 30sec., 1 min. , 2 min. .

QUICK DEFROST

- You only need to enter defrost time, oven automatically operates from high power to lower power.
- Cooking time may select up to 99 min. 99 sec.

START DELAY

- Used to start the oven at a later time.
- Before enter preset program, make the clock right.
- When the oven in preset mode, the light will flash continuously.
- Express cooking is not applicable.

MEMO

- If select multistage cooking, press to select cooking in first or second stage.
- Microwave display window will show the stage that's going on.

Special function

Child lock

- Used to prevent children use without adults directions of microwave ovens.
- When it starts "child lock" display light up, oven is disabled.

Timer

- Used to convenience you set timer.
- When timer works, the lights inside the oven,

fan and turntable operates, but microwave energy is zero. When timer ends, oven will emit beeps.

Auto reminder

- When finished of defrosting or cooking program, if do not press any key or open door, oven emit beeps every two minutes.

Safety Precautions

Usage

1. Before using the oven, read the manual most carefully and all the contents.
2. This oven is designed specifically for family use and not for commercial use.
3. Warning: children could use the oven without adult supervision only when they have been given adequate instructions to be able to use it safely and understand the danger if the oven is used inappropriately.
4. The user should check if the container is appropriate for use in a microwave oven.
 - a. Never use a metal rack or other metal container when using microwave cooking. Containers with edges decorated with gold or silver are not to be used in the oven. Ceramics, heat resistant glasses, plastics or paper container are usually used in microwaves.
 - b. Bottles with narrow neck should not be directly used in the oven.
 - c. When using paper to cover food cooked in the oven, please leave holes in the paper to let steam out. After done cooking, be careful to open the paper to avoid steam burns.
5. Before using the oven, put the shaft and turntable into place before placing container with foods onto the turntable for cooking.
6. If there is no food in the oven, please do not use the oven to prevent damage to the oven if it is used with no load.
7. Do not cook when there is a temperature thermometer inside the oven to prevent striking fire and damaged.
8. Be very careful in observing the oven if there is very little food cooked in the oven to prevent overheating and striking fire.
9. When food cooked in containers made of plastic, paper or other combustible material, be very careful of the cooking to prevent a fire.

10. Do not open the oven door there is a fire produced in the cavity due to cooking otherwise the fire may get bigger due to contact with air, instead the power to the oven should be cut immediately.
11. When taking food out of the oven, tool or gloves may be used to avoid burns due to hot temperature.
12. To prevent damage to the turntable, please observe the following items:
 - a. Cool down the turntable before washing it with water.
 - b. Never place hot food or container onto a cooled turntable.
 - c. Never place freezing food or container onto a hot turntable.
 - d. Note the maximum weight to be placed on the turntable is 5kg.
13. Every time when oven finished use, place a cup of water onto the turntable in the oven to prevent unwarranted operation damaging the oven.
14. Do not use the oven to store any article.
15. Baby bottles or food should be stirred and shaken and checked for its temperature before served to avoid burns.
16. Warning: it is very dangerous for anyone other than a qualified service person to attempt to repair the oven including the operations as disassemble the shield preventing the leakage of microwave energy.
17. Warning: if the oven door or door seal is damaged, the oven must not be used until a qualified serviceman repairs it.
18. Do not heat liquid or other food in a sealed container to avoid explosion.
19. If the power cord is damaged, to avoid danger it must be replaced by professional service persons.
20. Warning: the microwave oven is a product that needs to be looked for, Do not leave the oven if a cooking is taking place.
21. Warning: if cooking boiling water using this oven it is best to use container that's without lid and has a big mouth. If you want to add coffee powder, milk powder, oatmeal or other instant food you must first stir the boiling water or wait for it to cool to avoid burns.

Food

1. Never cook an egg with shell intact for pressure will make it explode, in addition, the yolk and white should be pierced several times.
2. Do not cook food for too long because it could not be helped if it is overcooked.
3. The cooking recipe provides approximate time of the cooking because there are a number of factors that influence it such as the preferred doneness of the food, initial temperature and shape of food, weight and amount of food and the shape of container used in cooking and its size, the arrangement of food, whether it is covered or not, if it is turned for uniform cooking, etc. please have a look of the “techniques of the microwave cooking” and adjust the cooking time if needed.

4. For food such as egg, chestnut, potato, sausage which there is no holes on them, the skin of these food should be cut or some holes or cracks should be made on its skin to prevent explosion due to expansion through heat.
5. Do not use the microwave oven to fry food.

Operation method

ADJUST CLOCK

Example: 6:45

Steps:

1. Press CLOCK
2. Press STOP
3. Press number keys 6 4 5
4. Press again CLOCK.

MICROWAVE COOKING

Example: input 2 minute, 30% cooking program.

Steps:

1. Press TIMER.
2. Press number keys 2 0 0
3. Press POWER to display
4. Press number key 3
5. Press START.

START DELAY

Example: if it is 1o' clock, to input a 2 minutes and 30% power cooking starting at 2 o'clock.

Steps:

1. Press START DELAY.
2. Press number keys 2 0 0
3. Press TIMER
4. Press number keys 2 0 0

5. Press POWER

6. Press number key 3

7. Press START.

Oven starts at 2 o'clock exactly.

EXPRESS

Example: use express cooking function, input 2 minute, high power cooking program.

Steps:

1. Press EXPRESS until 2:00 will be displayed.
2. Press START.

WEIGHT DEFROST

Example: input a 600g shrimp defrost program

1. Press WEIGHT DEFROST to display d3
2. press number keys 6 0 0
3. Press START.

Note: during weight defrost foods may be turned for uniformity.

QUICK DEFROST

Example: input a 5 min 30 sec. quick defrost program.

Steps:

1. Press QUICK DEFROST.
2. Press number keys 5 3 0
3. Press START.

Note: the quick defrost function is applicable to foods outside of the range of the weight defrost food's weight.

MULTI STAGE COOKING

This oven can set 2 or 3 stages cooking.

Example: input a multistage cooking program.

Quick defrost --- Microwave cooking ----
microwave cooking.

Steps:

1. Press QUICK DEFROST.
2. Press number keys to enter time.
3. Press MEMO and 1S lights up.
4. Press TIMER.
5. Press number keys to enter time
6. Press POWER.
7. Press number keys to enter power.
8. Press MEMO and 2S lights up.
9. Press TIMER.
10. Press number keys to enter time.
11. Press POWER
12. Press number keys to enter power.
13. Press START.

Note:

1. Quick defrost and weight defrost can only be

set in the first stage and memo pressed before entering 1 or 2 stage cooking.

2. Press MEMO before pressing START to reset 1st stage or 2nd stage cooking program.

3. Quick cooking cannot be set in this function.

TIMER

Steps:

1. Press TIMER key.
2. Use the number keys to enter needed time.
3. Press POWER.
4. Press number 0..
5. Press START.

CHILD LOCK

A. To set the child lock.

Steps: In waiting mode, press STOP key for 3 seconds. The system beeps will sound and the LOCK indicator will light up and other programs are not functional.

B. Unlock the child lock.

Steps: press STOP key for 3 seconds. The system beep will sound and the LOCK indicator will shut off and other programs are functional.

Microwave usage common sense

1. If the oven does not work, should check:

- If plugged in properly.
- Oven door shut properly.
- If the child lock is locked.
- Household protector is cut or burned.

2. The oven accidentally starts unloaded.

Press STOP immediately or open the oven door to stop it.

3. When voltage fluctuates, oven works still only output power may have affected to have bad influence on cooking results and it is normal.

Microwave oven cleaning and care

Important

Never use powerful cleaning agent, benzine, sand powder or metal brush to clean any parts of the oven.

1. Before cleaning the cavity, shut off the microwave oven, and plug off from the socket.
2. Regularly keep clean the cavity. When food or soup spatters onto the cavity wall, clean with a wet cloth. If it gets very dirty, use a soft detergent, never use rough or abrasive detergents.
3. Glass tray must be cleaned regularly. First use warm soap water then use clean water to wipe.
4. Turntable shaft or cavity floor must be cleaned regularly. Soft detergent may be applied, warm soap water may be used to clean shaft and replace it after cleaning.
5. The door seal must be clean regularly, first use soft dry cloth dipped in the soap water then use a soft dry cloth wipes it.
6. After using a soft dry cloth dipped in soap water to clean the outer surface of the oven, wipe clean with a dry cloth, be careful do not let water sip into oven seals or air duct.
7. If control panel gets wet, use a soft cloth to clean it, do not use crude, abrasive detergent to wipe the control panel, when do it, open the door to avoid accidentally start the oven.
8. If there is water drops due to steam, wipe off with a soft cloth.
9. If there is foreign smell inside the oven, erase it with a cup of lemon water for 5-7 minutes.
10. If the oven is not used for a long time, plug off from power source and place it in a airy and no erosive gas environment.
11. If the oven malfunctions, it must be repaired by a qualified person from the manufacturer, anyone other than a qualified person try to repair it would be dangerous.